AllNet Hardware Reference Manual



4CHANNEL Isolated RS485/422 COMM. MODULE

aNS-SC04I485

MAR 2016 ©2016 COMIZOA, All rights reserved

> Hardware Manual Revision : 1.0.1 Revision Data 2016. 03. 02

COMputer Innovation is Zoomed by Our Affection



Table Of Contents

1	개요	3
2	제품 사양	4
3	Block diagram ·····	5
4	커넥터 핀 배열	6
5	상태 LED ·····	6
6	Serial Communication 신호 ······	7



개요



AllNet Series - aNS-SC04I485 (Serial Communication 4ch)

aNS-SC04I485는 network 기반 제어기인 AllNet Series의 4채널 RS422/485 시리얼 통신 모듈입니다. 본 매뉴얼은 aNS-SC04I485의 하드웨어 구성과 기능에 대해 설명하는 하드웨어 매뉴얼 입니다. AllNet 시스템의 전반적인 내용은 AllNet product System reference 매뉴얼을 참조 바랍니다.




제품사양

Dimension	80 * 100 * 20 (mm)		
Install	AllNet Backplane		
Power consimption	70mA Typ.	90mA Max.	
Serge Protection Connector	10KV		
Serge Protection Connector	MR-34RFA+		

Common Specification

Contents	Details
Number of channels	Protocol selectable 4 channels
Protocol	RS422 / RS485
Baud-rate	2400 ~ 38400 bps (optional 115200)
FIFO	64-Byte Transmit / 64-Byte Receive
Termination Resister (422 / 485)	150 Ohm
ESD Protection	Contact Discharge (Typ.) 4kV
ESD Protection	Air Discharge (Typ.) 8kV
Isolation Surge protection	2.5kV

Serial Communication Specification

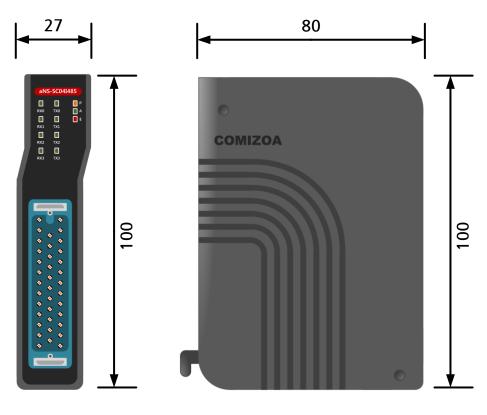


Dimension



Block diagram

aNS-SC04I485는 aNS-PWR에서 공급되는 System power로 구동됩니다. System Power는 DC-DC Converter로 절연 되어 제어부 전원으로 공급 됩니다. 외부로 출력되는 전원은 과전류에 대한 보호회로가 내장되어 있습니다.

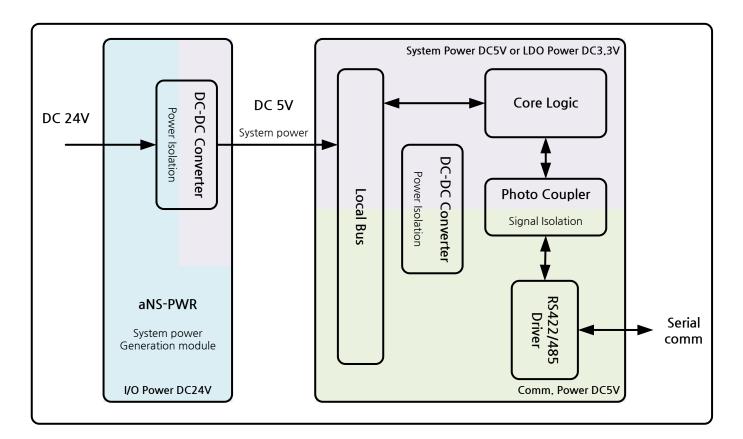

aNS-SC04I485 System Block diagram



커넥터 핀 배열

4채널 RS422/485 시리얼 통신을 위한 포트입니다.

	Pin #	Pin Name	Pin #	Pin Name	Pin #	Pin Name
34\ \12	34	NC	-		12	NC
\$ 22 \$	33	TX0-	22	R_TX0(D0)-	11	NC
	32	TX0+	21	R_TX0(D0)+	10	NC
	31	GND	20	GND	9	GND
	30	TX1-	19	R_TX1(D1)-	8	NC
	29	TX1+	18	R_TX1(D1)+	7	NC
	28	TX2-	17	R_TX2(D2)-	6	NC
	27	TX2+	16	R_TX2(D2)+	5	NC
23 × 13 × 1	26	GND	15	GND	4	GND
	25	TX3-	14	R_TX3(D3)-	3	NC
	24	TX3+	13	R_TX3(D3)+	2	NC
MR-34RFA+	23	NC	-		1	NC

aNS-SC04I485 Serial Communication Connector

상태 LED

aNS-SC04I485의 LED는 모듈의 상태와 각 채널의 상태를 나타냅니다.

	Ν	ame	Descriptions
aNS-SC041485	р	Power LED	모듈에 전원이 입력되면 점등 됩니다.
RX0 TX0 🔂 A	А	Active LED	Node master 모듈과 통신이 접속되면 점등됩니다.
RX2 TX2	E	Error LED	모듈에 에러가 발생시 점등됩니다.
RX3 TX3	RX#, TX#	Status LED	해당 채널을 access 할 때에 일정시간 점멸합니다.


aNS-SC04I485 LED Status




Serial Communication 신호

aNS-SC04I485의 각 채널 통신 방식은 소프트웨어적으로 설정할 수 있습니다.

모듈 부팅 시 모든 채널은 disable 됩니다. 다음 각 통신 방식에 대한 결선 구성을 참조 바랍니다.

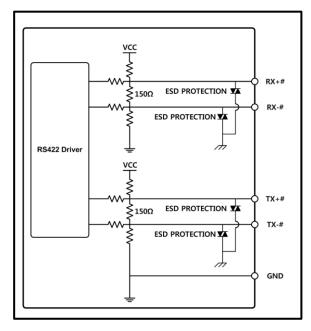

RS422 Communication circuit

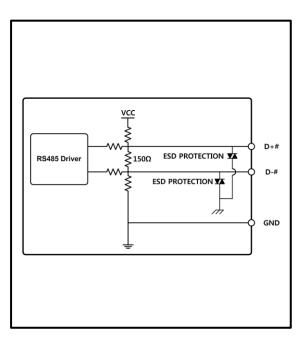

RS485 Communication circuit



Hardware Reference Manual Update List

	No.	Version	Date	Changes in
ſ	1	1.00	2014.07.29	First Edition
ſ	2	1.00	2014.11.11	Block diagram, 커넥터 핀 배열
ſ	3	1.01	2016.03.02	글꼴변경 (나눔고딕, 굴림)

AllNet Series HRM

Copyright holder : COMIZOA *CO.,LTD Copyright (c) by COMIZOA CO.,LTD. All right reserved.* 2016. 03. 02.



COMIZOA *CO.,LTD* http://www.comizoa.com Tel) +82 - 42 - 936 - 6500 Fax) +82 - 42 - 936 - 6507

All the details including figures and programs included in this manual is protected by Korean Copyright. Any parts of this manual can be copied or distributed without COMIZOA's permission.

COMputer Innovation is Zoomed by Our Affection